

Name/Model: WINvote

Vendor: Advanced Voting Solutions, Inc. (formerly Shoup Voting Solutions, Inc.)



How To Vote On This Machine:

1. After checking in at the polling place, the voter will approach one of the terminals. An election official will activate the machine. The voter will touch the "Click Here to Start" button on the welcome screen, and the ballot-marking process will begin.
2. The screen will display one race at a time, with available choices listed below the race name. Write-in candidates can be selected by touching the "Write-In" button at the bottom of the choice list. After making a selection, touch the "Next" button on the bottom of the screen.
3. When all selection have been made, the voter will be taken to a summary screen that lists that name of each race and the option that was selected by the voter. If the voter wishes to change any of these races, he/she should simply touch the name of the race and make another selection.
4. When the voter is satisfied with the summary screen, he/she should touch the red "Next" button on the bottom-right part of the screen. The next screen has a large red "VOTE" button. After touching that button, the ballot has been cast.

REMEMBER: You have the right to ask for assistance from a poll work during the voting process. If the poll worker is unable to resolve any machine-related problem you might have, **do not cast your ballot on the machine**. You can demand to vote on another machine or by paper.

**If you have any problem voting,
call 1-866-OUR-VOTE for help**