

Name/Model: ELECTronic 1242

Vendor: Guardian Voting Systems, Inc. (a division of Danaher Controls, Inc.)



How To Vote On This Machine:

1. When voters enter the precinct, poll workers confirm that they are properly registered to vote. The poll worker then uses an operator's panel on the back of the machine to choose the ballot style appropriate for that voter.
2. The voter enters the curtains (see pictures at left above) and only the races for which they are permitted to vote are activated.
3. The voter then votes by pressing a numbered box beside each choice in each race on the ballot. **It is very important that the voter does not push the large, green "Vote" button until done voting; a vote inadvertently cast may not be redone.**
4. Flashing lights on the left-hand side of the ballot indicate races for which the voter has not yet voted. If the voter tries to choose more than one choice in a given race (over-voting), the machine will ignore the second choice. If the voter makes a mistake, they can press the numbered box again to deselect their choice; the indicator light will go out. The voter may then select the correct choice.
5. When done voting, the voter presses a large green "Vote" button in the lower-right corner of the voting machine.

REMEMBER: You have the right to ask for assistance from a poll worker during the voting process. If the poll worker is unable to resolve any machine-related problem you might have, **do not cast your ballot on the machine.** You can demand to vote on another machine or by paper.

**If you have any problem voting,
call 1-866-OUR-VOTE for help**

