

MicroVote: MicroVote MV-464



How to Vote on This Machine :

1. After checking in at the polling place, the voter is sent to an available terminal.
2. The voter makes each candidate selection by pressing the gray button beside a candidate's name. This turns a light on next to the button. To change a selection, a voter presses the gray button a second time, and the light turns off.
3. The voter may navigate forward through ballot screens by pressing the green "Advance Ballot" bar at the bottom of the panel. The voter may navigate back through ballot screens by pressing the blue "Review Ballot" bar at the bottom of the panel. The voter must view all pages of the ballot before the machine will allow a vote to be cast.
4. To cast a write-in vote, the voter presses the gray write-in selection button on the bottom left side of the panel. The light next to it will start blinking. The voter then writes in the desired name on the paper tape in the write-in window, also at the bottom left of the panel. The voter may change his or her mind by pressing the same write-in button again to turn out the light, and then vote as usual.
5. To cast the ballot, the voter presses the red "Cast Vote" button on the bottom right side of the panel.

REMEMBER: You have the right to ask for assistance from a poll worker during the voting process. If the poll worker is unable to resolve any machine-related problem you might have, **do not cast your ballot on the machine**. You can demand to vote on another machine or by paper.

**If you have any problem voting,
call 1-866-OUR-VOTE for help**